

(R) ROTHSCHENK
Load securement
Made in Germany



(R) SeaDry

SeaDry, BoxDry and data
loggers for container

Already done and entered in attached list:

SeaDry + BoxDry: Number and start weight of each desiccant
Data logger: Number of each data logger

At loading point:

1. Container A

8 pcs of SeaDry Hook H 800 g, 4 per long container side. Mount each desiccant to one of the lashing eyes.

If possible, place 1 additional desiccant in direct proximity to the door.

Container B

No SeaDry desiccants in the container




2. Container A

Cartons 1200 x 800 x 450 mm: 4 pcs of BoxDry each

Cartons 1200 x 800 x 900 mm: 6 pcs of BoxDry each

OSB boxes 1140 x 1140 x 900 mm: 6 pcs of BoxDry each

Attach the desiccants to the upper part of the inside walls of the cartons/boxes using the adhesive strip.

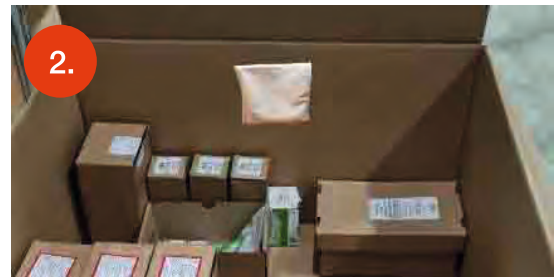

Please note: There must be approx. 5 cm of free space around each BoxDry desiccant.

Container B

No BoxDry desiccants in the container

3. Containers A and B

2 data loggers each

Position one data logger centrally and on eye level on a long container side. Attach data logger to the container wall with adhesive strip.

Position other data logger within one of the cartons or OSB boxes in the container.



4. Activate each data logger by a **short press on START, then press START again for at least 3 seconds to start recording** (REC visible on the display). Record temperature and humidity at loading point and enter data in the list.

5. If possible, take pictures of: - each desiccant position - each data logger position - condition of each trial container - condition of each of the stowed goods - finished fully loaded containers

Final inspection: Are trial containers A and B equipped as follows?


Container A: SeaDry + BoxDry + data logger + Manual „At unloading point“

Container B: Data logger + Manual „At unloading point“

At unloading point:

Concerning containers equipped with SeaDry + BoxDry + data loggers

1. Take out data loggers (one at container wall, one within carton / OSB box) and **press STOP button for at least 3 seconds in order to stop recording** (END visible on the display).
2. Unmount SeaDry desiccants from the lashing eyes, weigh each desiccant, and enter weight in the list.
Please pay attention to entering the data of the correct desiccant in the respective line of the list (e.g. weight of desiccant A01 in line A01).
3. Take all BoxDry desiccants out of cartons and boxes, weigh each desiccant, and enter weight in the list.
Please pay attention to entering the data of the correct desiccant in the respective line of the list (e.g. weight of desiccant B01 in line B01).
4. Put all data loggers and all completed lists from the trial containers together into the provided return package. Please seal the package, and send it to:

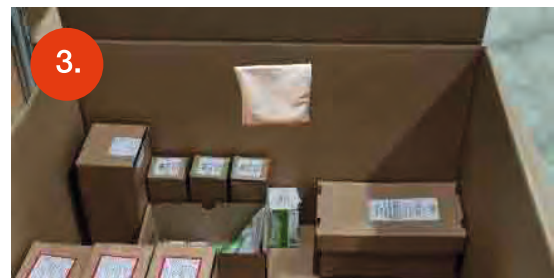

Please note: In case the data loggers get lost or damaged, resulting from negligence of the person in charge, Rothschenk GmbH will claim compensation.

At unloading point:

Concerning containers equipped only with data loggers

1. Take out data loggers (one at container wall, one within carton / OSB box) and **press STOP button for at least 3 seconds in order to stop recording** (END visible on the display).
2. Put all data loggers and all completed lists from the trial containers together into the provided return package. Please seal the package, and send it to:



Please note: In case the data loggers get lost or damaged, resulting from negligence of the person in charge, Rothschenk GmbH will claim compensation.